



Manual o2 optimizer.

Step one take out the key out of the ignition.

Take of the left panel. (figure 1)

Follow the wire from the o2 sensor that is located in the frond of the header. (figure 2)

The plug is on the right side of the bike.

The o2 optimizer comes between this plug (figure 3)

don't bend the optimizer as the interior will break

Reassemble everything and you are ready to go.



Figure 1



figure 2



figure 3